



**RHINO**

C10



## IN THE BOX


1. Rhino C10
2. USB-C cable
3. Fast charging power adapter
4. Sim pin
5. Tempered glass screen protector\*
6. Protective case\*
7. Foldable stand\*

\*If purchased with the Rhino C10



# POWER ON YOUR RHINO C10

Press & hold the power button for ~4 seconds,  
until the device vibrates

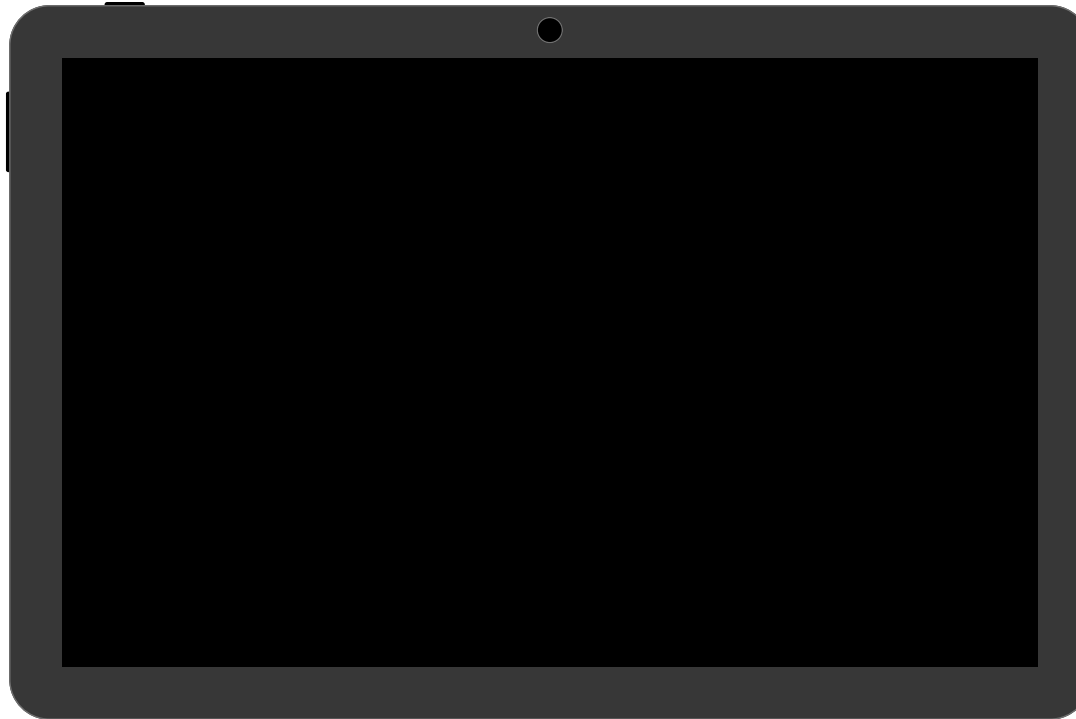



# ADJUST THE VOLUME

Use the volume rocker on the side, top half increases volume, bottom half decreases. Press and hold for rapid adjustment.





# INSERT A HEADSET





# CHARGING


Insert the provided USB-C cable into the USB-C port, connect to a suitable outlet and allow to charge.





# USE NFC

For Google Pay, identity, or other NFC uses, tap the C10 where indicated on the device against the NFC reader.

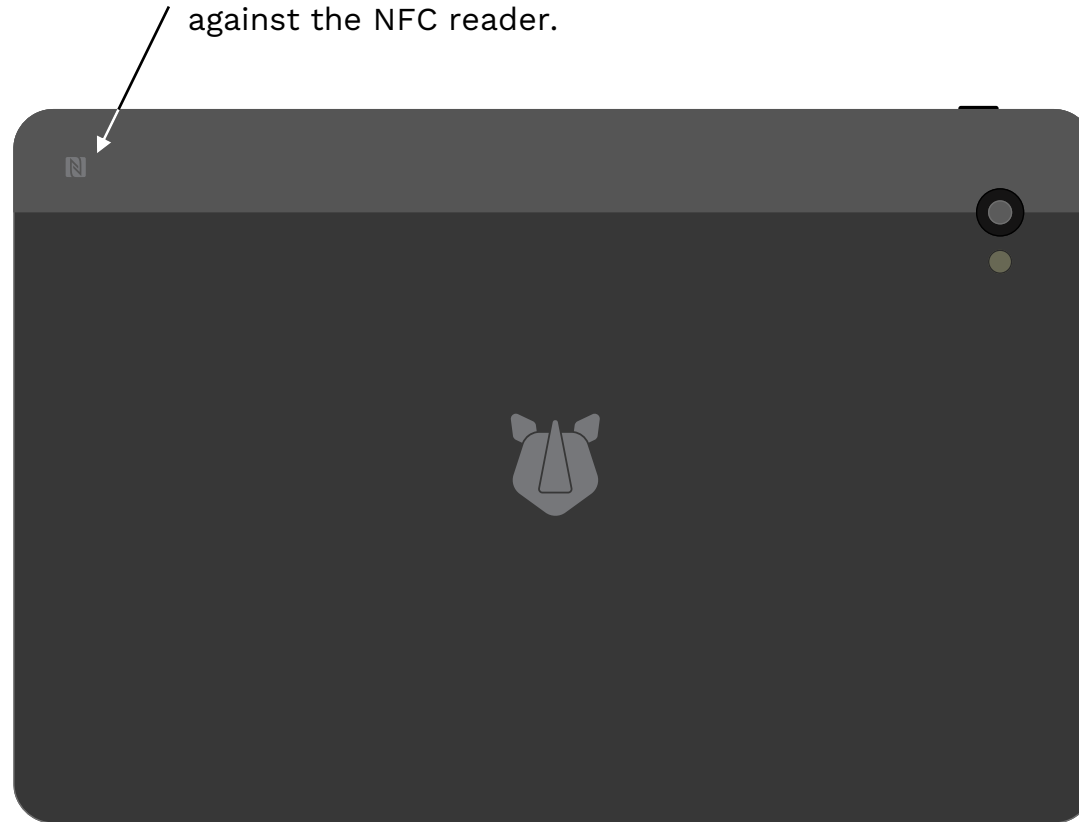



## GOOD TO GO

For further guidance, please see the full user guide located at:

[support.rhinomobility.com/devices/c10](https://support.rhinomobility.com/devices/c10)